

ThinkStation

Setup Menu

 Main


 Devices

 Advanced

 Power

 Security

 Startup

 Exit



Network Setup

Onboard Ethernet Controller

Enabled 

Select whether to enable or disable Onboard Ethernet Controller.
NOTE:
If this option is changed to "Disabled", the Intel(R) AMT related functions will be disabled.

Wireless LAN Access

Enabled 

<Enabled> Enables use of Wireless LAN.
<Disabled> Disables use of Wireless LAN. Wireless LAN will not be available in OS.

Wireless LAN PXE boot

Disabled 

Select whether to load Wireless LAN UNDI Driver to support wireless LAN PXE boot or https boot.

Wireless Auto Disconnection

Disabled 

Enable/Disable Wireless Auto Disconnection feature when Ethernet cable is connected to Ethernet LAN on system. If Enabled, Wireless LAN radio is automatically turned off whenever Ethernet cable is connected.
Note that only onboard Ethernet attached is supported by this feature.

PXE IPV4 Network Stack

Enabled 

Select whether to enable or disable PXE IPV4 network stack

PXE IPV6 Network Stack

Enabled 

Select whether to enable or disable PXE IPV6 network stack

HTTPs Boot

Disabled 

F1 Help
Esc Exit

↑↓ Select Item
←→ Select Menu

+/- Change Values
Enter Select > Sub-Menu

F9 Setup Defaults
F10 Save and Exit