

ThinkStation

Setup Menu

 Main

 Devices

 Advanced

 Power

 Security

 Startup

 Exit



Startup

> Boot Priority Order

Use Up and Down arrows to select a device.

<+> and <-> move the device up or down.

<x> excludes/includes the device to boot.

First Boot Device

Select the first boot priority group. BIOS will try to boot from the group first before trying the boot order.

USB Boot Support

<Enabled> The system could support boot from USB devices.

<Disabled> The system could not support boot from USB devices.

Boot Up Num-Lock Status

This field indicates the state of the NumLock feature of the keyboard after Startup. If NumLock is "On", the keys on the keypad will act as numeric keys. If NumLock is "Off", the keys on the keypad will act as cursor keys.

Fast Boot

This feature can record the last successful startup state to reduce the POST time at the next startup. It is recommended to turn off "fast boot" if you often use CD/DVD or network to load your operating system

Select "Enabled", system could start up faster.

Select "Disabled" to switch back to normal boot.


Option Keys Display

Controls the system software option key prompts (such as F1 key) when the system is turned on.

Select "Enabled" to display the prompts.

NOTE:

Disabling the prompts will not affect the function of a specific key.

Boot Order 


Enabled 

On 

Enabled 

Disabled 

F1 Help
Esc Exit

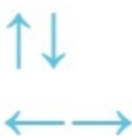

Select Item
Select Menu



Enter

Change Values
Select > Sub-Menu



F10

Setup Defaults
Save and Exit